AIPTEK®

PENCAM 1.3M SD

Installation Guide

Downloaded from www.Manualslib.com manuals search engine

Contents

Specifications 1
Notice 2
Bundled Accessories 3

Your Camera 4
- Battery Installation 5
- Using a SD Card 6
- Strap and Tripod Use 7

Using your Camera 8
- LCD Display 9
- Focus 10

Taking Pictures 11
- Still pictures 12
- Taking AVI Movies 14
- Erase 15
- For Best Results 16

Bundled Software 17
PenCam SD Manager Installation 18
- Software Installation 19
- Hardware Installation 20

Launching PenCam SD Manager 21
Mode Selecting 22
- DSC Mode 23
- LIVE Mode 28

TWAIN Manager 31
Troubleshooting 32
AIPTEK Service 35

Downloaded from www.Manualslib.com manuals search engine

Specifications

System Requirements

- Microsoft Windows 98SE / 2000 / ME / XP
- Pentium II 266MHz (or equivalent)
- 32MB RAM (64MB RAM recommended)
- Video Card with 4 MB of RAM
- 4 X speed CD-ROM
- An available USB port
- Direct X 8.0 or above

Specifications

- Sensor Type 1.3M CMOS
- Memory 64 Mbits Built-in SDRAM
- Effective pixels 1.3M (1280 x 960 pixels)
- External SD Card Slot / Support SD Card up to 128 MB/ compatible with MMC

Main Functions

- Digital Camera :
  SXGA (1280 x 960 pixels): 10 ± 3 pictures
  VGA (640 x 480 pixels): 40 ± 10 pictures
- Digital Camcorder :
  High resolution (640 x 480 pixels) / 6-8fps
  Normal resolution (320 x 240 pixels) /8-10fps
- PC Camera :
  High resolution (640 x 480 pixels) / 20fps
  Normal resolution (320 x 240 pixels) / 20fps

- Focus Macro : 12"(30cm) / Normal : 39"(100cm) to infinity
- Auto Exposure Auto White-Balance
- Self Timer 10 - second Self Timer
- Power Saving Auto power off if idle over 60 seconds
- Battery: AAA x 2 (Alkaline) .
- USB port
- Dimension : 3.9" x 1.7" x 1.4"
- Weight: 51.2 g
- This package doesn't include SD Card/MMC.

Downloaded from www.Manualslib.com manuals search engine

Notice

1. Do not drop, puncture or disassemble the camera.
2. Remove batteries during long periods between use.
3. Avoid using batteries of different brands at the same time.
4. Avoid using leaking or distorted batteries.
5. Avoid all contact with water and dry hands before using.
6. Do not expose the camera to high temperature or leave it in direct sunlight.
7. Avoid pressing hard on the camera body.

Downloaded from www.Manualslib.com manuals search engine

Bundled Accessories

Camera

CD driver

User guide

Tripod



USB cable



2 x AAA Alkaline batteries

Strap

Downloaded from www.Manualslib.com manuals search engine

Your Camera

Camera Parts

(1) Shutter
(2) View finder
(3) Lens
(4) Focus
(5) LCD display
(6) Mode button
(7) Strap-holder
(8) Battery cover
(9) SD Card slot
(10) USB port
(11) Tripod port

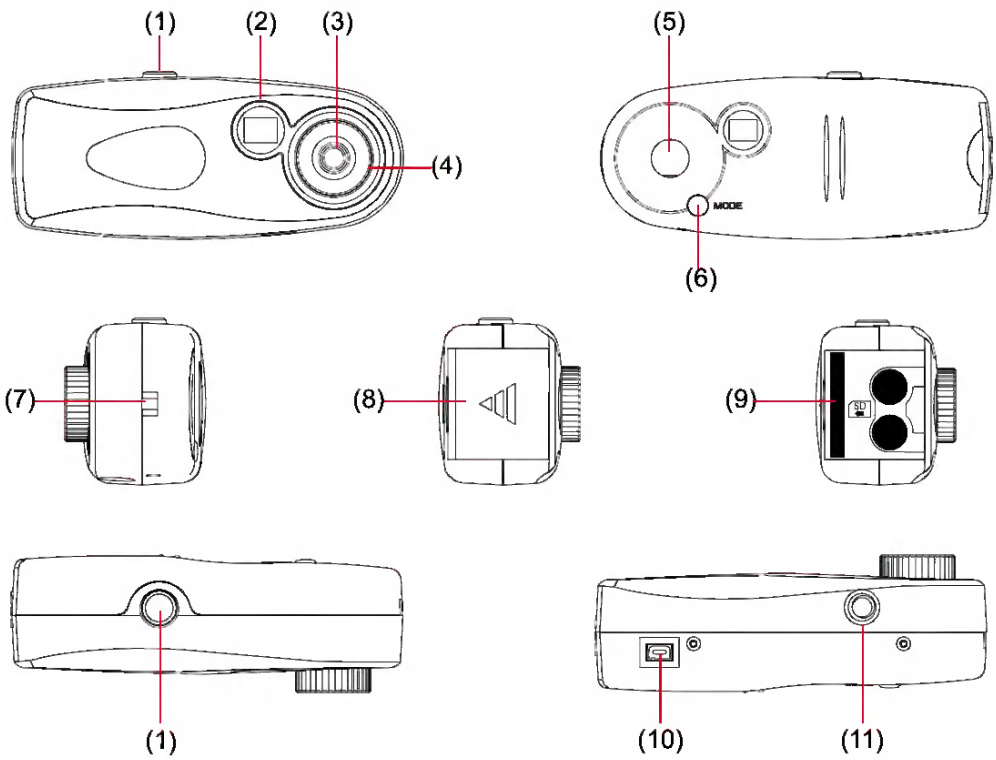

Downloaded from www.Manualslib.com manuals search engine

Battery Installation

Battery Installation

Your camera runs on two AAA alkaline batteries.
High performance batteries are for this camera.

Battery Indicators

Full Low

- on the LCD display indicates low battery. Transfer data from SDRAM to your PC immediately to avoid data loss. All SDRAM data will be lost when the camera loses power from battery exhaustion or removal.
- When not using your camera for extended periods, we suggest you remove the batteries.
- Make sure that you've downloaded data to PC before removing the battery cover.

Downloaded from www.Manualslib.com manuals search engine

Using a SD Card/ MMC

External Memory/ SD Card (Secure Digital Memory Card) / MMC Card (MultiMediaCard)

In addition to 64Mbits SDRAM, your camera can store data on SD Cards /MMC. Data will be automatically stored on the SD card/ MMC until it is full, with additional data stored on SDRAM. Insert your card as shown.

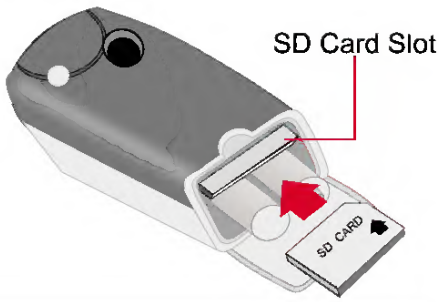

Format SD Card / MMC

" Err" message appears on LCD display as you confront the following two conditions:

(1) The camera can't read FAT 32 or NTFS format. If your card is already designated as FAT 32 or NTFS format by your card reader, please format your card by the camera.

(2) When the memory card is full of data from other devices: Please transfer data to your card reader or format your card.

- **Format Steps**

1. Press and hold the mode button for five seconds until the LCD shows the " FOR " icon.
2. Then press the shutter button to format SD Card/ MMC.

- This package doesn't include SD card or MMC.
- To store data on the built-in memory, please take out SD Card or MMC.
- NOTE: Formatting SD card or MMC will erase all of your images
- (AVI Movies) functions only when SD Card/ MMC is inserted.
- If your have any problems with your memory card, please refer to the user guide of your SD Card/MMC.

Downloaded from www.Manualslib.com manuals search engine

Strap and Tripod Use

Strap

Attach the carrying strap for convenience and safety.

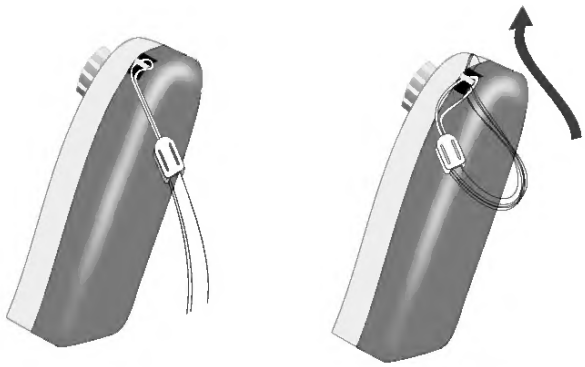

Tripod

Use a tripod to minimize camera movement and ensure optimal image quality, especially while shooting longer movies, self-portraits or video conferencing.

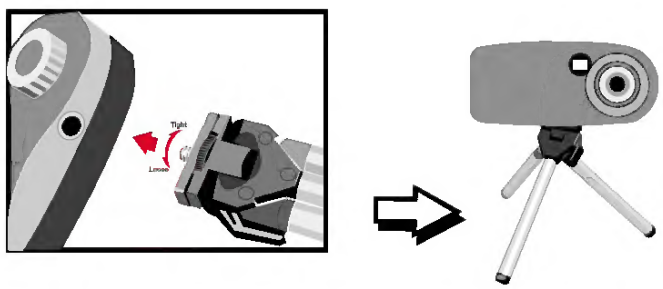

Downloaded from www.Manualslib.com manuals search engine

Using your Camera

Turning on your camera

Press the Mode button for 2 seconds to turn on your camera.

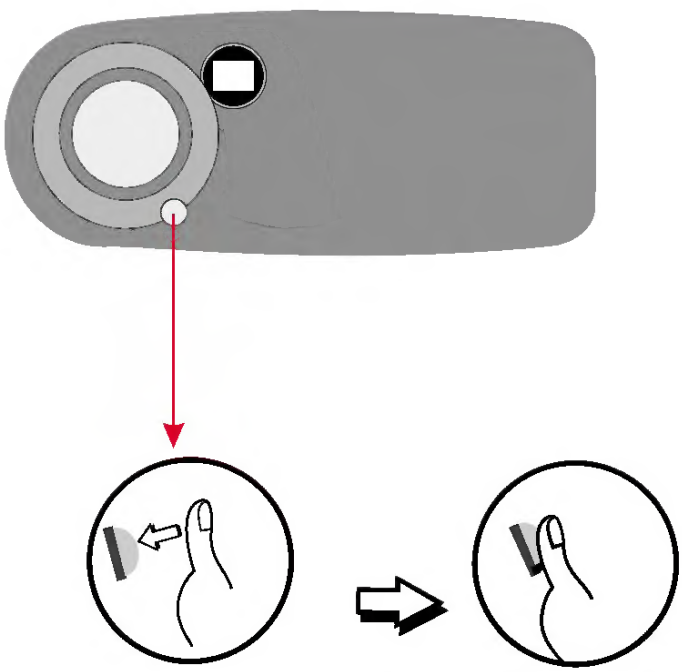

- Manual shut-off: press the mode button and shutter button simultaneously for 2 seconds.
- Auto shut-off: your camera will automatically shut off after 60 seconds of inactivity.

Downloaded from www.Manualslib.com manuals search engine

LCD Display

LCD Display

(1) Still picture
(2) AVI-Movies
(3) Self-Timer
(4) Erase
(5) Resolution
(6) Counter
(7) SD card inserted
(8) Battery indicator
(9) Plug-in USB Cable

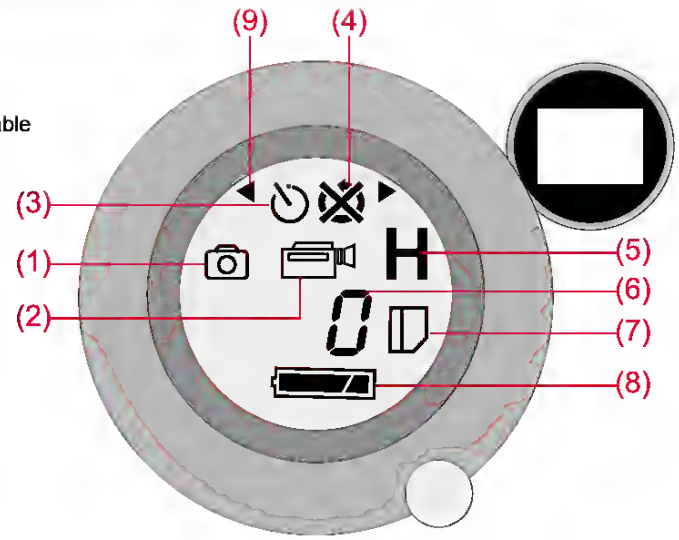

Note: The ✕ icon signifies delete last image or video.
The ⊠ signifies erase all.

Mode Selecting

Press Mode button to shift between functions on the LCD display. Press the Shutter button to select a function.



● functions only when SD Card/ MMC is inserted.

Downloaded from www.Manualslib.com manuals search engine

Focus

Focus

Set focus before taking pictures.

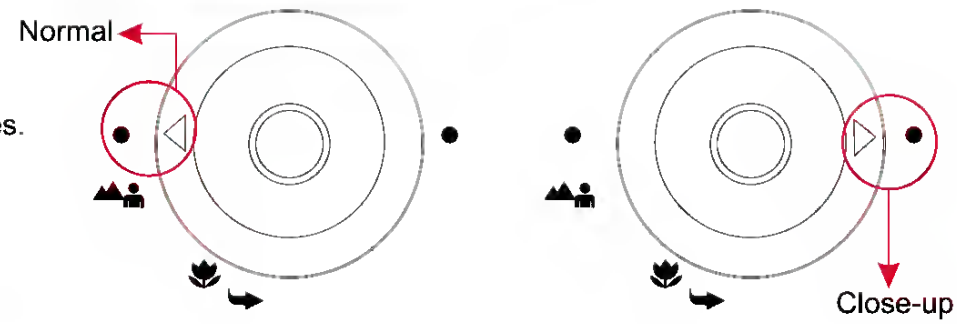

Normal

Close-up

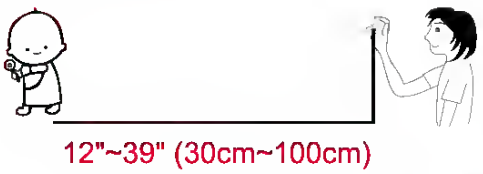

Downloaded from www.Manualslib.com manuals search engine

Taking Pictures

Set flicker setting

Your camera has default flicker setting. The default setting usually corresponds to the flicker setting standard of each nation. If you use the camera outside your country or you find pictures appear unnatural flickering noise, please select 50Hz or 60Hz until flickering noise stops.

Country	England	Germany	France	Italy	Spain	Nether-lands
Setting	50Hz	50Hz	60Hz	50Hz	50Hz	50Hz
Country	Portugal	America	Taiwan	China	Japan	Korea
Setting	50Hz	60Hz	60Hz	50Hz	50/ 60Hz	60Hz

- Steps:

(1) Use Mode button to select **H** .

(2) Press Mode button for 5 seconds.

(3) Press the shutter to select 50 Hz or 60 Hz.

(4) Press Mode button to leave flicker setting mode.

Downloaded from www.Manualslib.com manuals search engine

Still Pictures

Still pictures

Images taken in Still picture mode are stored as JPEG files.

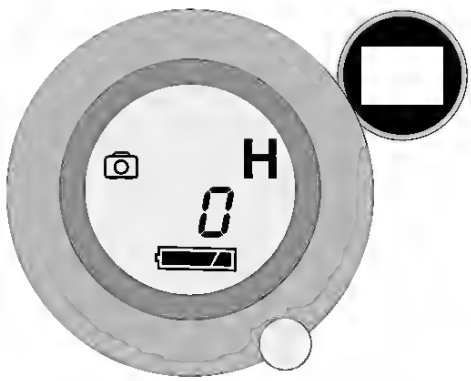

- Steps:

(1) Use Mode button to select .
(2) Select image resolution (see below)
(3) Center the target in the viewfinder.
(4) Press the shutter button.

H / L Image resolution

Two kinds of resolution are available for still image:
H (1.3 mega pixels) and **L** (VGA).

- Steps

(1) Press Mode button to select **H**.
(2) **H** flashes.
(3) Press Shutter button to switch to **H** or **L**.
(4) Press Mode button again to confirm resolution.

Icon	H	L
Resolution & Quality	1.3 Mega Pixels (1280x960)	VGA (640x480)

Downloaded from www.Manualslib.com manuals search engine

Still Pictures

Pictures Storage Capacity

Pictures storage capacity depends on SD Card storage capacity and your SDRAM memory. See the table to your right for more information

Icon	H	L
Resolution	1280x1024 pixels (1.3M pixels)	640x480 pixels VGA
Quality	High quality	Normal
32MB Memory (Example)	100 pictures ± 30%	200 pictures ± 30%

Note This table is for your reference. Actual number of pictures taken by different resolution and quality will vary, depending on color saturation.

Self-timer

- Steps:

(1) Press Mode button to select .
(2) Press shutter button.
(3) The counter will count down from ten and automatically release the shutter.

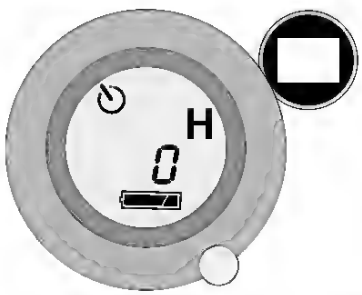

Downloaded from www.Manualslib.com manuals search engine

Recording AVI Movies

Your movies are stored as AVI files. Image size is 640x480 pixels (high resolution) and 320x240 pixels (low resolution), with frame rate 6-10 fps. Maximum recording time is determined by the capacity of your SD Card.

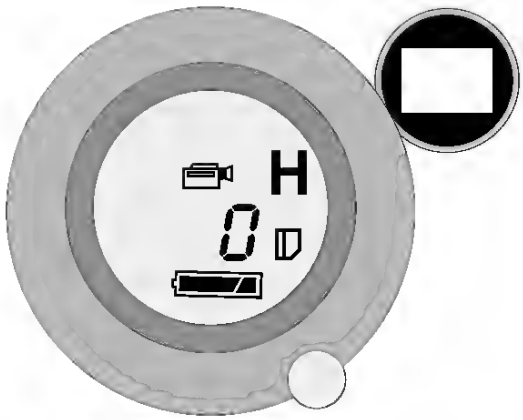

- **To Record:**

(1) Press Mode button to select .
(2) Center the target in the viewfinder
(3) Press the shutter button.
(4) Length of movie is recorded in counter.
(5) Press the shutter button again to stop recording.

SD Card Storage Capacity	Movie (640x480)	Movie (320x240)
32MB	about 80 seconds	about 320 seconds

- (AVI Movies) functions only when SD Card/ MMC is inserted.

Downloaded from www.Manualslib.com manuals search engine

Erase

Erase Last

The last saved file (AVI or JPEG) will be deleted.

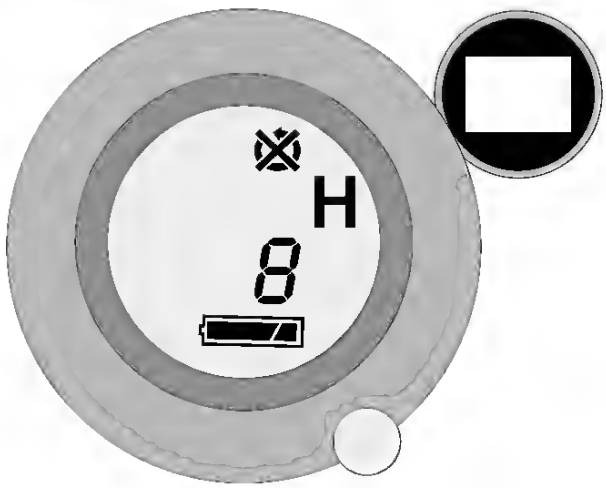

- Steps:

(1) Use Mode button to select .
(2) Press the shutter button twice to erase last pictures or AVI Movie.
(3) Use Mode button to leave Erase mode.

Erase All

All files(AVI or JPEG) saved in both SD Card and internal memory will be deleted.

- Steps:

(1) Use Mode button to select .
(2) Press the shutter button twice to erase all pictures or AVI Movie.
(3) Use Mode button to leave Erase mode.

Downloaded from www.Manualslib.com manuals search engine

For Best Results

1. Keep the focus set to except for extreme close-ups.

2. Make sure your subject is well lit from the front.

3. Keep the camera level and steady when releasing the shutter.

4. Make sure you have adequate light when taking still pictures or movies, especially indoors.

5. For best quality video, move the camera slowly during filming.

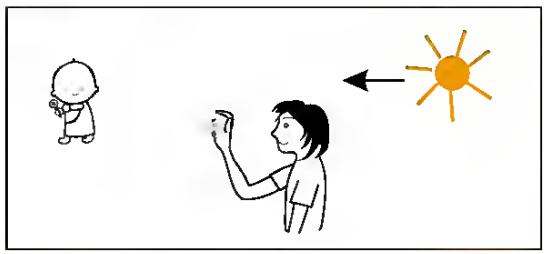

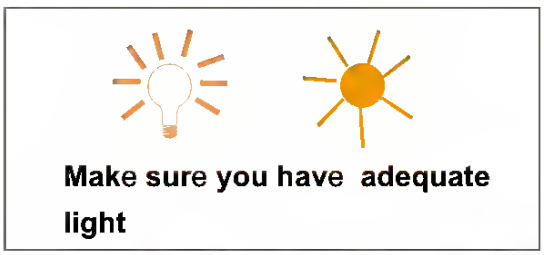

Downloaded from www.Manualslib.com manuals search engine

Bundled Software

PenCam SD Manager and other bundled software packages

PenCam SD Manager is your camera's driver as well as basic operating software. Your camera also comes bundled with the following video and image processing software. For more information, see each application's help file or visit the supplier's website.

NetMeeting
Http://www.microsoft.com/windows/netmeeting/default.asp

VideoLive Mail
Http://www.goCyberlink.com

Photo Explorer
Http://www.ulead.com/pex/runme.htm

Photo Express SE
Http://www.ulead.com/pe/

Acrobat Reader
Http://www.adobe.com/products/acrobat/readstep2.html

Cool 360
Http://www.ulead.com/cool360/runme.htm

Applications	Main Feature
(1) PenCam SD Manager	PenCam SD Manager configuration software
(2) NetMeeting	Video & Audio Conferencing
(3) VideoLive Mail	Desktop videomail software
(4) Photo Explorer	Visual file management software
(5) Photo Express SE	Edit and create exciting illustrations & photos
(6) Acrobat Reader	Lets you view and print Adobe Portable Document Format (PDF) files
(7) Cool 360	Photo Panorama Software

Downloaded from www.Manualslib.com manuals search engine

PenCam SD Manager Installation

PenCam SD Manager features

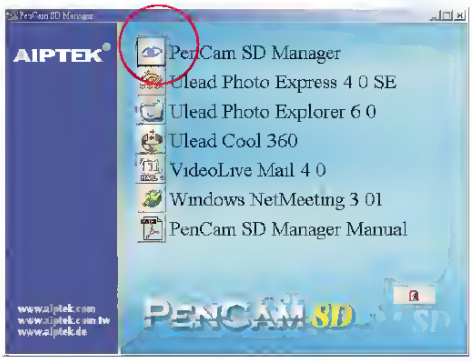

The PenCam SD Manager allows you to:

- Download pictures and AVI movies to your PC.
- View pictures and AVI movies on screen.
- Transfer pictures and AVI movies to customized albums.

Downloaded from www.Manualslib.com manuals search engine

Software Installation

Installing the PenCam SD Manager

(1) Insert the CD-ROM in your CD drive. The installation menu should open automatically.

(2) Click to start PenCam SD Manager installation.

(3) Follow the onscreen instructions to complete Installation.

(4) Click " Yes" to install Direct X 8.1. This will restart your PC.



(5) icon will appear on PC desktop after installation.

Click on " Finish" to complete installation.

Downloaded from www.Manualslib.com manuals search engine

Hardware Installation

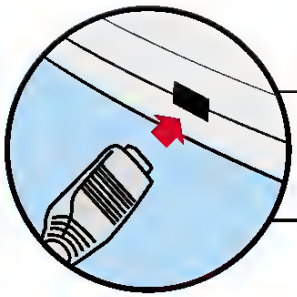

❶ Connect the smaller end of the USB cable to the USB port of your camera.

❷ Plug the larger end of the USB cable to the USB port of your PC.

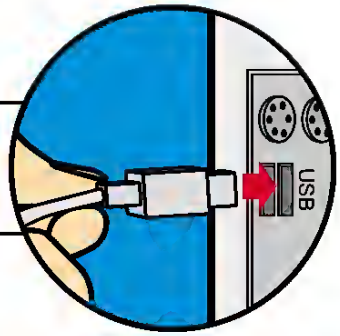

⚠ ● Software installation must be completed before hardware installation.

Downloaded from www.Manualslib.com manuals search engine

Launching PenCam SD Manager

Follow the following two ways to launch PenCam SD Manager :

❶ Click the " " icon on the Desktop to execute the program where you can begin to use your camera.

OR

❷ Click on the "Start" menu and go up to "Programs". Then go to the folder named " PenCam SD Manager" and select it.

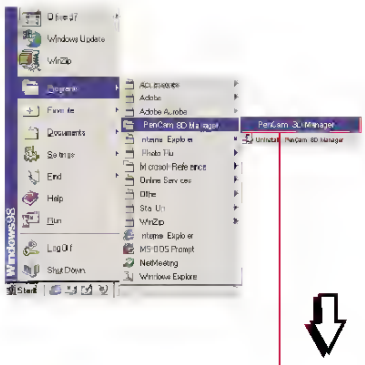

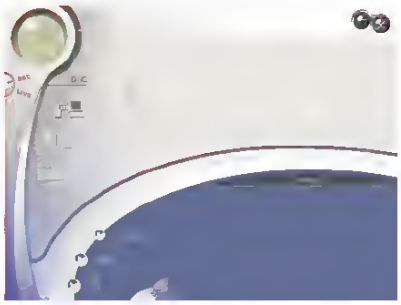

● To uninstall PenCam SD Manager, select " Uninstall PenCam SD Manager "

OR

Reinstall PenCam SD Manager to uninstall PenCam SD Manager.

Downloaded from www.Manualslib.com manuals search engine

Mode Selecting

› Press the "Live View" button to change the camera to PC Camera mode.

› Press the "DSC Function" button to change the camera to DSC mode.

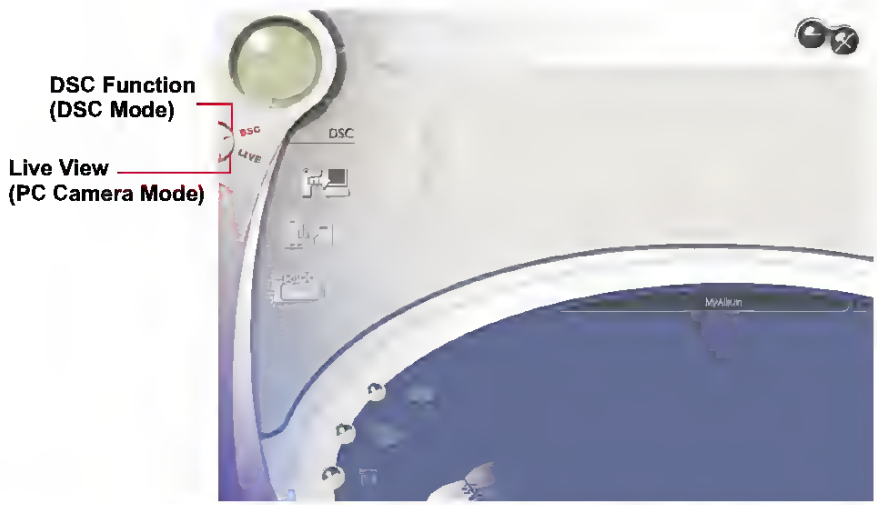

Downloaded from www.Manualslib.com manuals search engine

DSC Mode

(1) DSC Function (DSC Mode)
(2) Transfer images to the work area
(3) Transfer images to the album
(4) Create AVI file
(5) Send Mail
(6) Select All
(7) Delete
(8) Album Manager
(9) Album
(10) Delete
(11) Select All
(12) Image
(13) Work area
(14) Minimize
(15) Exit

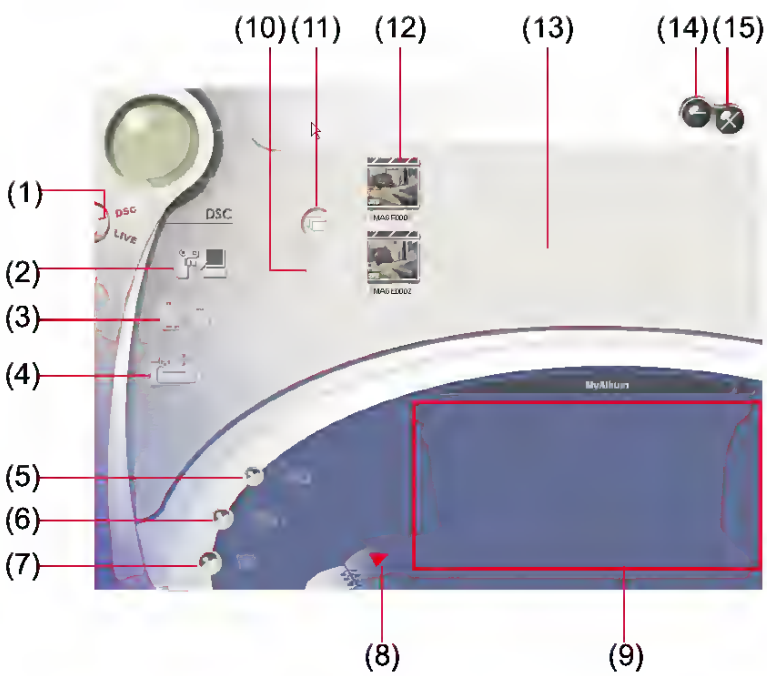

Downloaded from www.Manualslib.com manuals search engine

DSC Mode

Downloading pictures and movies

1. Make sure your camera is connected to your PC via the USB cable.

2. Set the PenCam SD Manager to DSC mode. (Note: This is the default mode when you open the PenCam SD Manager).

3. Click to download your pictures to the work area.

4. Highlight the images you want to transfer.

5. Apply format to choose high(1280x960) or normal (640x480) resolution.

6. Check " Enhanced " to enhance your images to 2.1 Mega pixels. This enhanced format offers higher quality images, but also require more disk space.

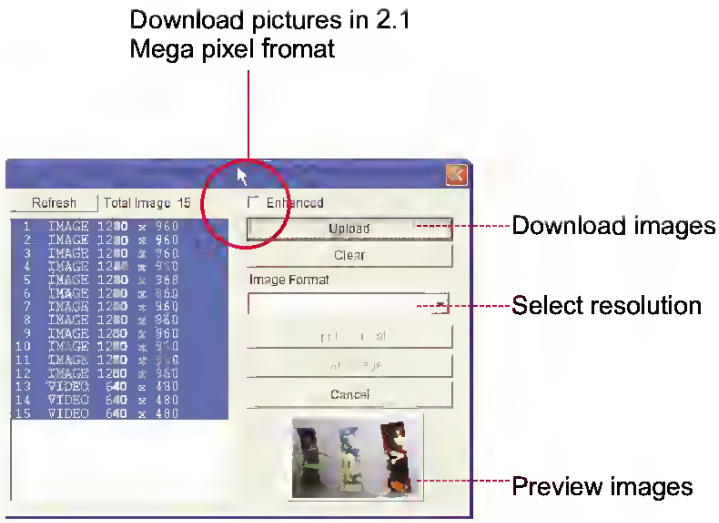

Downloaded from www.Manualslib.com manuals search engine

DSC Mode

Viewing pictures

Double-click any picture or movie to launch the viewer.

Viewing movies

Double-click any AVI movie to automatically launch the movie in your default media player.

Downloaded from www.Manualslib.com manuals search engine

DSC Mode

Album Manager

1. Highlight a picture on the work area and click to transfer to the Photo Album.

2. Click the Album Manager to create a new Photo Album.

3. Key in a new album name.

4. Click ❹ to designate a path where the album will be stored.

5. Click " Update" ❺ to confirm the new album is created.

6. Click ❻ to enter the new created album.

❷ 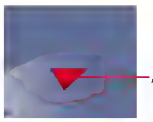

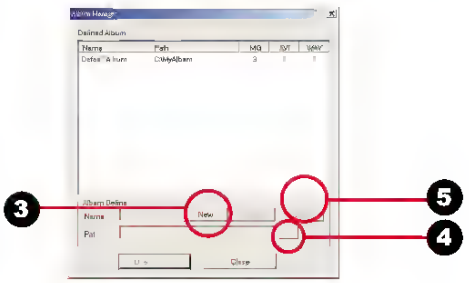

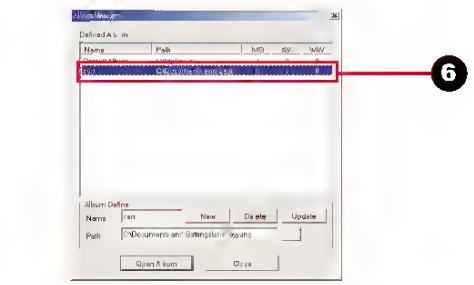

Downloaded from www.Manualslib.com manuals search engine

DSC Mode

Creating AVI files

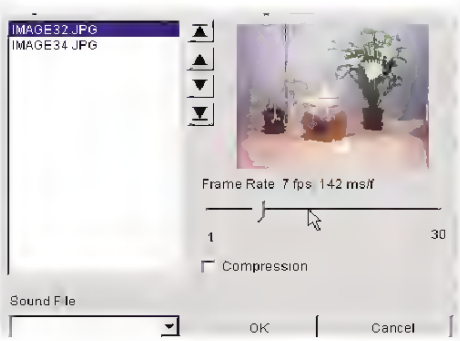

1. Select jpg / bmp images from the work area.

2. Click to load the images to the AVI File Manager.

3. Order the image sequence, and adust the frame rate.

Downloaded from www.Manualslib.com manuals search engine

LIVE Mode

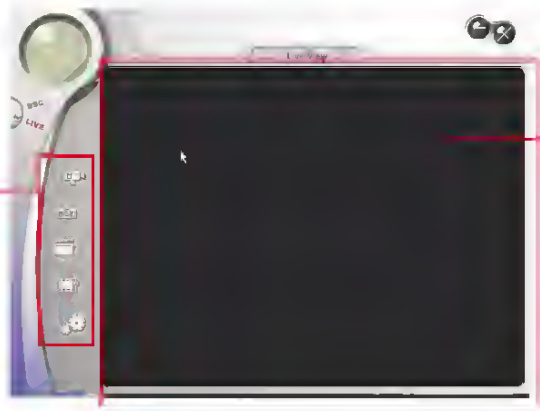

Preview Window

Record live video

Capture live still image

Set image size

Advanced settings (default settings recommended)

Select video source (if you have more than one image import device installed)

● Steps

1. Press
2. Adjust recording speed and time.
3. Press " Start to Record "

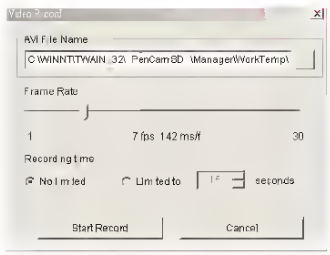

Downloaded from www.Manualslib.com manuals search engine

LIVE Mode

Set Image Size

- **Color Space**

Select one of the following functions when you have different needs.

- RGB 24: better image quality
- I420: faster speed

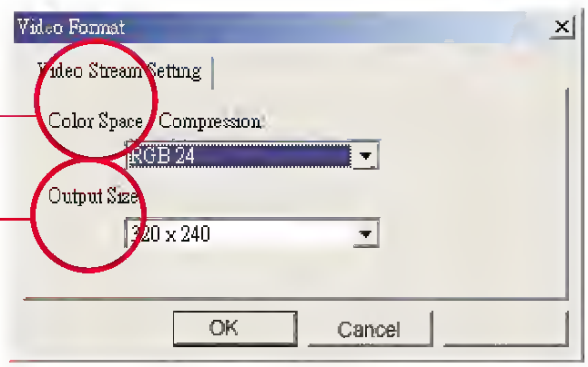

- **Output Size**

Setting output size can change the size of the preview window. The default size is 320x240. Choose larger pixels when you need a larger preview window.

160 x 120
320 x 240
640 x 480

Downloaded from www.Manualslib.com manuals search engine

LIVE Mode

Advanced settings

- **Video Setting**

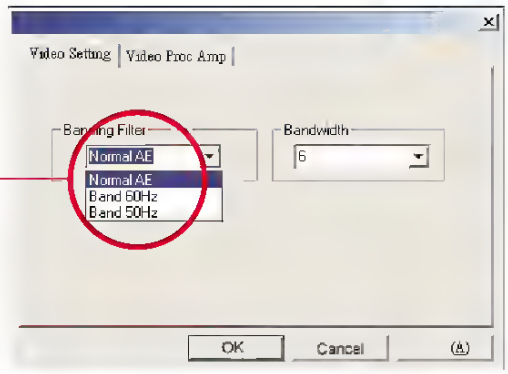

- Banding Filter:

When your PC screen flickers, please change the banding filter in Video Setting. The refresh rate (the number of times the screen is redrawn per second) is the most likely cause of flicker. Select 50Hz or 60Hz until your PC screen stops flickering.

- **Custom Video Pro Amp**

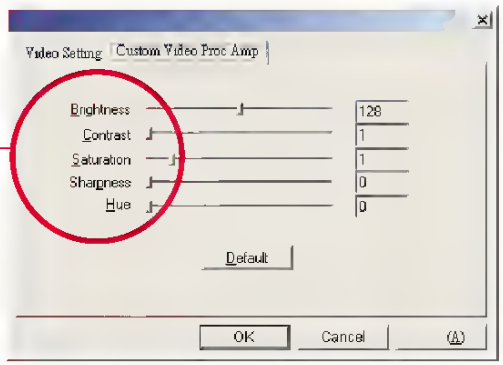

You can use the default setting or change settings (brightness, contrast, saturation, sharpness, and hue) on your own.

Downloaded from www.Manualslib.com manuals search engine

TWAIN Manager

The Manager allows you to directly download your photos to any image editing software.

- Steps:

1. Under " File", Select Device".
2. Choose "Data Source " and click "OK".
3. Under " File ", select " Acquire Image ".

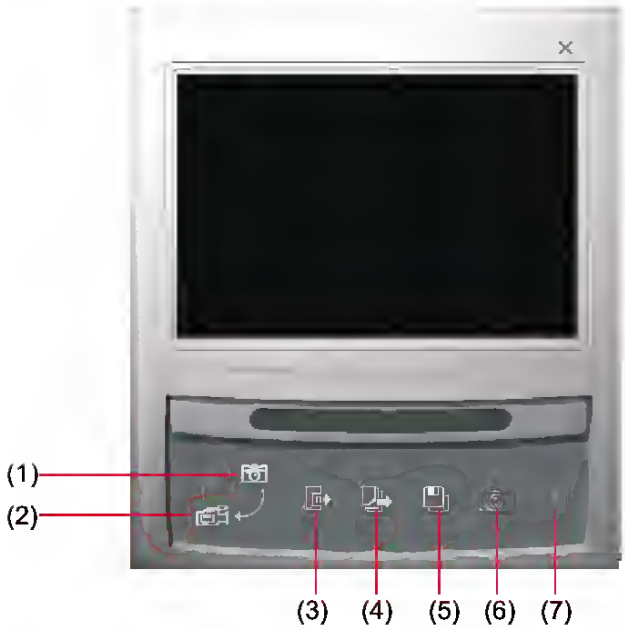

(1) DSC Mode
(2) Live View
(3) Transfer
(4) Transfer All
(5) Save AVI
(6) Snapshot
(7) Setting

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

Symptom	Actions
1. When installation step missed:	● Please remove the camera driver and other related software and follow each installation step to reinstall the camera.
2. When conflict with another camera driver capture device:	● If you have any other camera installed on your computer, completely remove the camera and it's driver from your system to avoid a driver conflict with another camera or capture device.
3. When unable to install driver:	● When installing camera driver under Windows 98SE, you'll be asked to insert a 98SE CD-ROM. Please follow the command to complete the installation.

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

Symptom	Actions
4. When unable to download images :	● Please re-plug the camera to download images.
5. Adjust VGA card when image color is not fully saturated:	● Please follow the operation steps : Go to control panel → Double - click " Display " → Click on " Settings " → Click on " Colors " → Choose " High Color " or " True Color ".
6. Please adjust the acceleration function of VGA card when unable to play images in Video Conferencing mode or in AVI mode.	● Please follow the operation steps : Go to control panel → Double - click " Display " → Click on " Settings " → Click on " Advanced " → Click on " Performance " or " Troubleshooting " → Set the " Hardware acceleration " from " Full " to " None ".

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

Symptom	Actions
7. Noise appears on PC screen while camera used as a video conferencing camera.	● Change Band Filter to 50 Hz or 60 Hz.
8. Images are blurred.	● Adjust focus.
9. Images are too dark.	● Take pictures while there is adequate light. ● Use editing tools such as Photoshop or PhotoImpact to adjust image brightness.
10. AVI files can't be played back	● Install Direct X 8.0 or above.

Downloaded from www.Manualslib.com manuals search engine

AIPTEK Service

If you have any problems, please contact AIPTEK office to which your country is assigned. Please note: If you reside outside of the United States or Germany, please contact AIPTEK Intl Inc.

AIPTEK, Inc.
51 Discovery, Suite 100
Irvine, CA 92618, USA
TEL: 949-585-9600
FAX: 949-585-9345
http://www.aiptek.com
Hours: 8 a.m. to 5 p.m. Pacific Time
Online registration website:
http://www.com/registration/registration.htm
(Online registration entitles you to special services, downloads and promotions.)

AIPTEK International GmbH
HalskestraBe 6
47877 Willich, Germany
TEL +49 21 54 - 92 35 50
Fax +49 21 54 - 92 35 68
http://www.aiptek.de

AIPTEK Int'l., Inc.
No. 5-1 Innovation Road I
Science-Based Industrial Park
Hsin-Chu 300
Taiwan, R.O.C.
Tel: 886-3-5678138
Fax: 886-3-5678569
http://www.aiptek.com.tw

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

82-152-90010v1.1

Downloaded from www.Manualslib.com manuals search engine